ASSEMBLY INSTRUCTIONS
Corner WC-Shutter Door

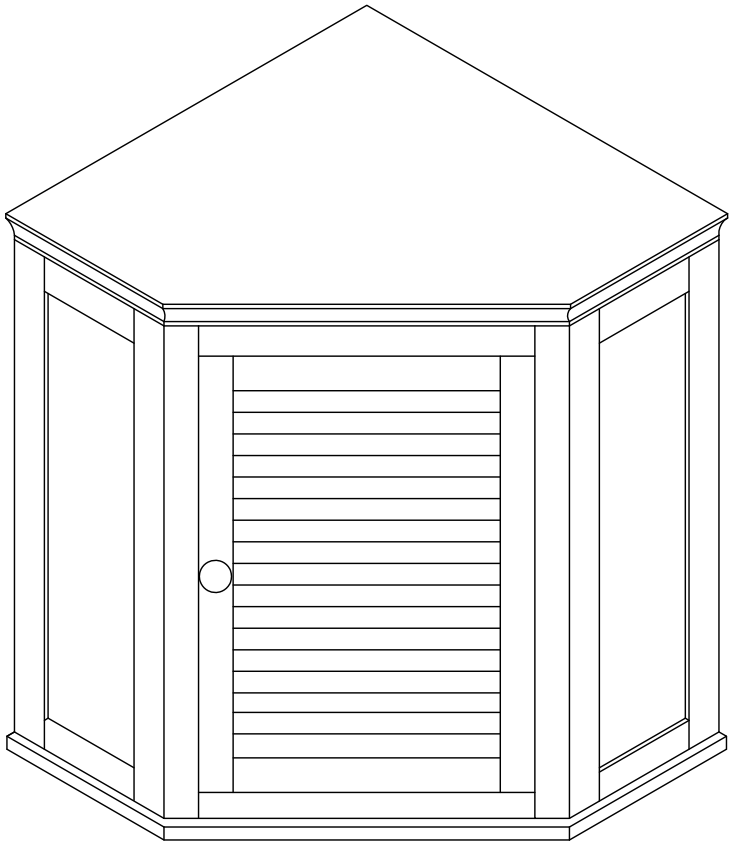

ASSEMBLY INSTRUCTIONS-IMPORTANT

Carefully unpack & identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts, please call the company you place order with or please email to:service@eleganthf.net

INSTRUCCIONES PARA ARMAR-IMPORANT:

Desempaque cuidadosamente e identifique cada componente antes de tartar de empezar su ensambladura. Verifique la lista de partes. Por favor tenga cuidado cuando arme la unidad y siempre coloque las piezas sobre una superficie plana, suave y limpia. Si necesita ayuda con el armado, envie un correo electzórico a service@eleganthf.net

DIRECTIVES DE MONTAGE-IMPORTANT:

Avant de commencer l' assemblage, déballez délicatement toutes les pièces et repérez-les sur la liste des pièces. Procédez avec soins durant l' assemblage et posez toujours les pièces sur une surface proper, douce et lisse. sie vouo plait e-mail á service@eleganthf.net

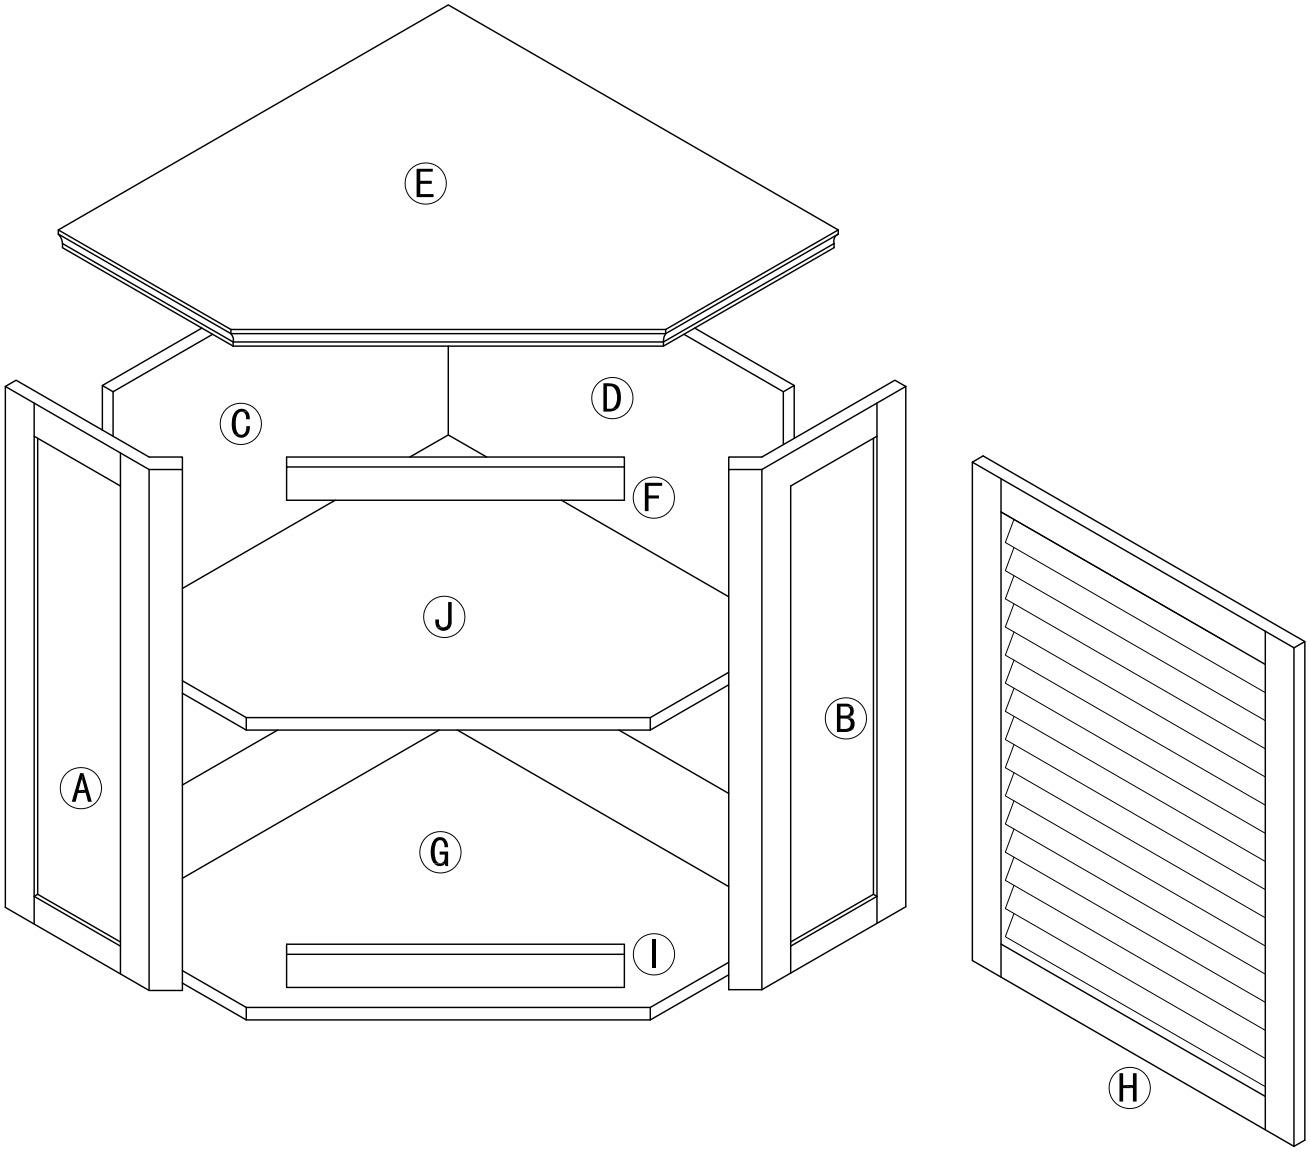
E
C
D
F
J
A
B
G
I
H

①  25 PCS ϕ8*30	②  16PCS	③ Big camlock 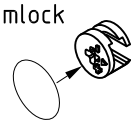 12PCS ϕ15*12
④  3 PCS ϕ4*25	⑤  4PCS ϕ3*12	⑥ 1 PC
⑦ 1 PC ϕ4*20	⑧ 4 PCS	⑨ Small camlock 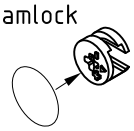 4PCS ϕ15*9
⑩ 2 PCS	⑪  2 PCS ϕ4*35	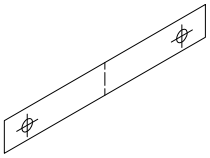

STEP 1
ÉTADE 1
PASO 1

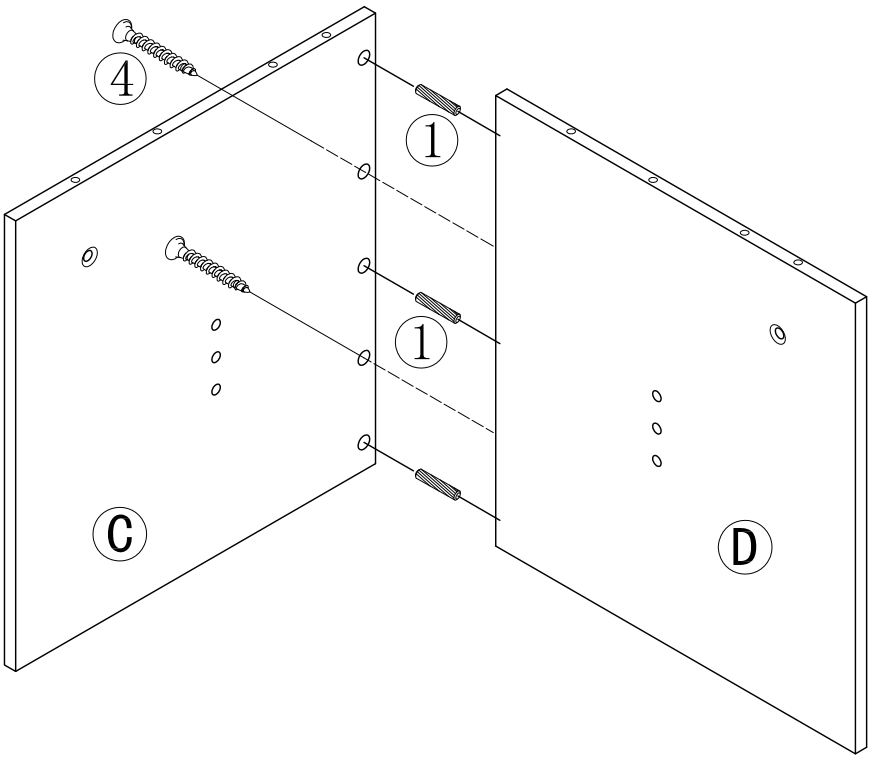

Push cam lock into the hole, then take a screwdriver (like pictured)and twist 45 degrees until it is locked in place.

STEP 2
ÉTADE 2
PASO 2

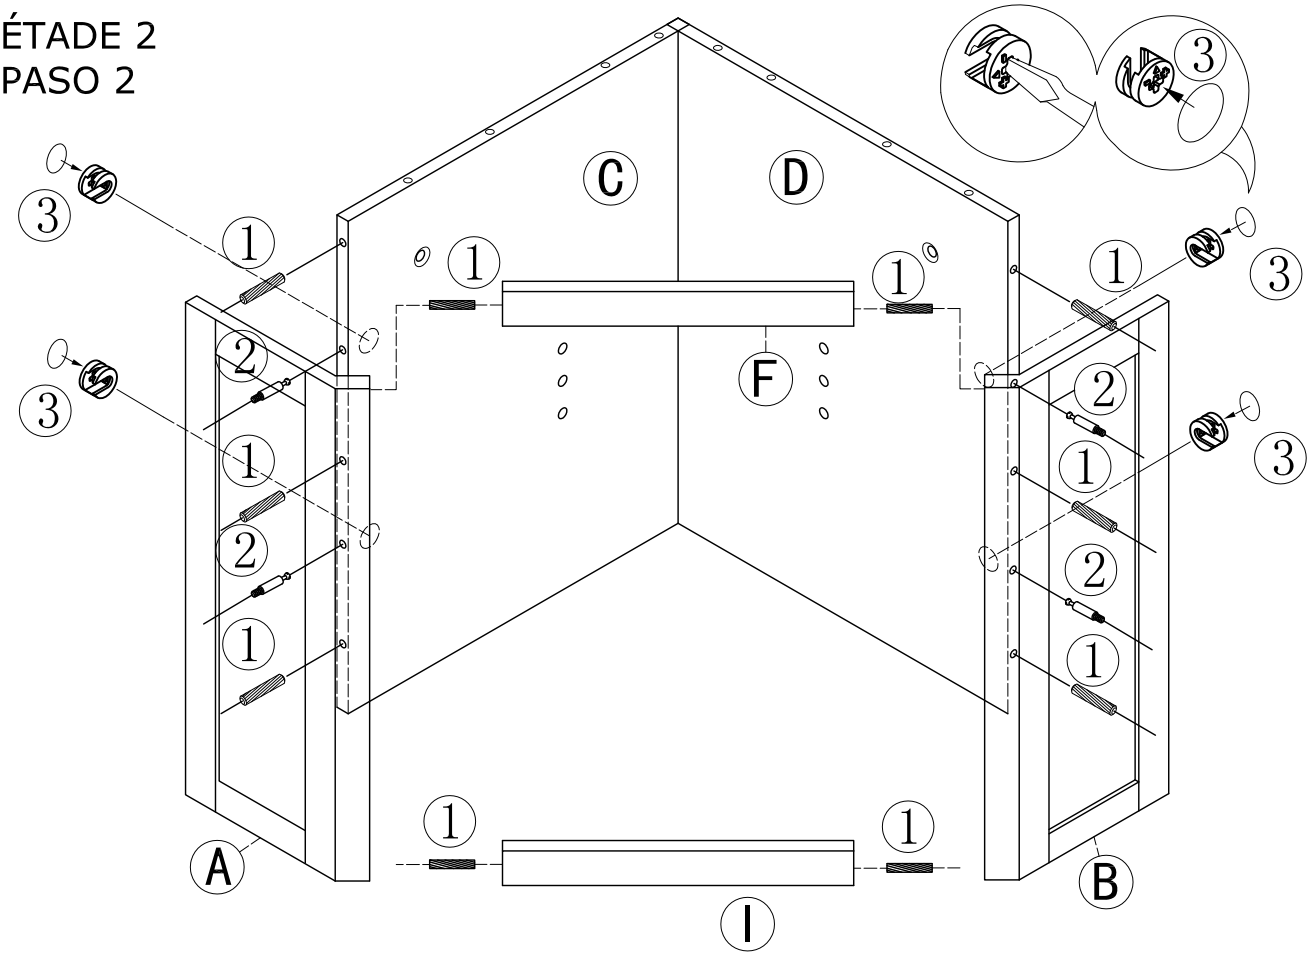

STEP 3
ÉTADE 3
PASO 3

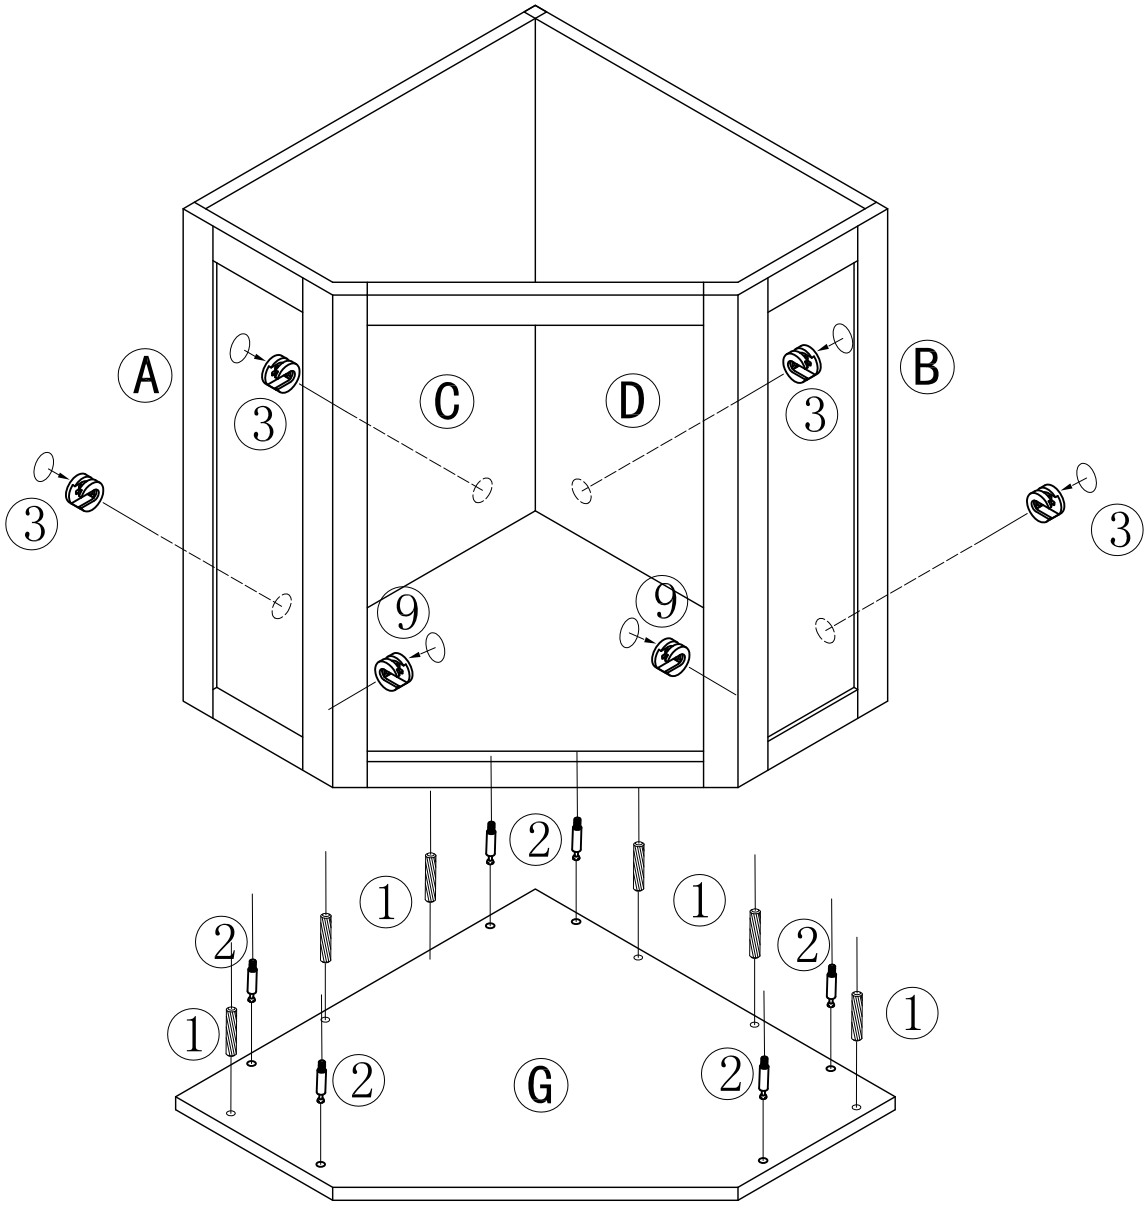

STEP 4
ÉTADE 4
PASO 4

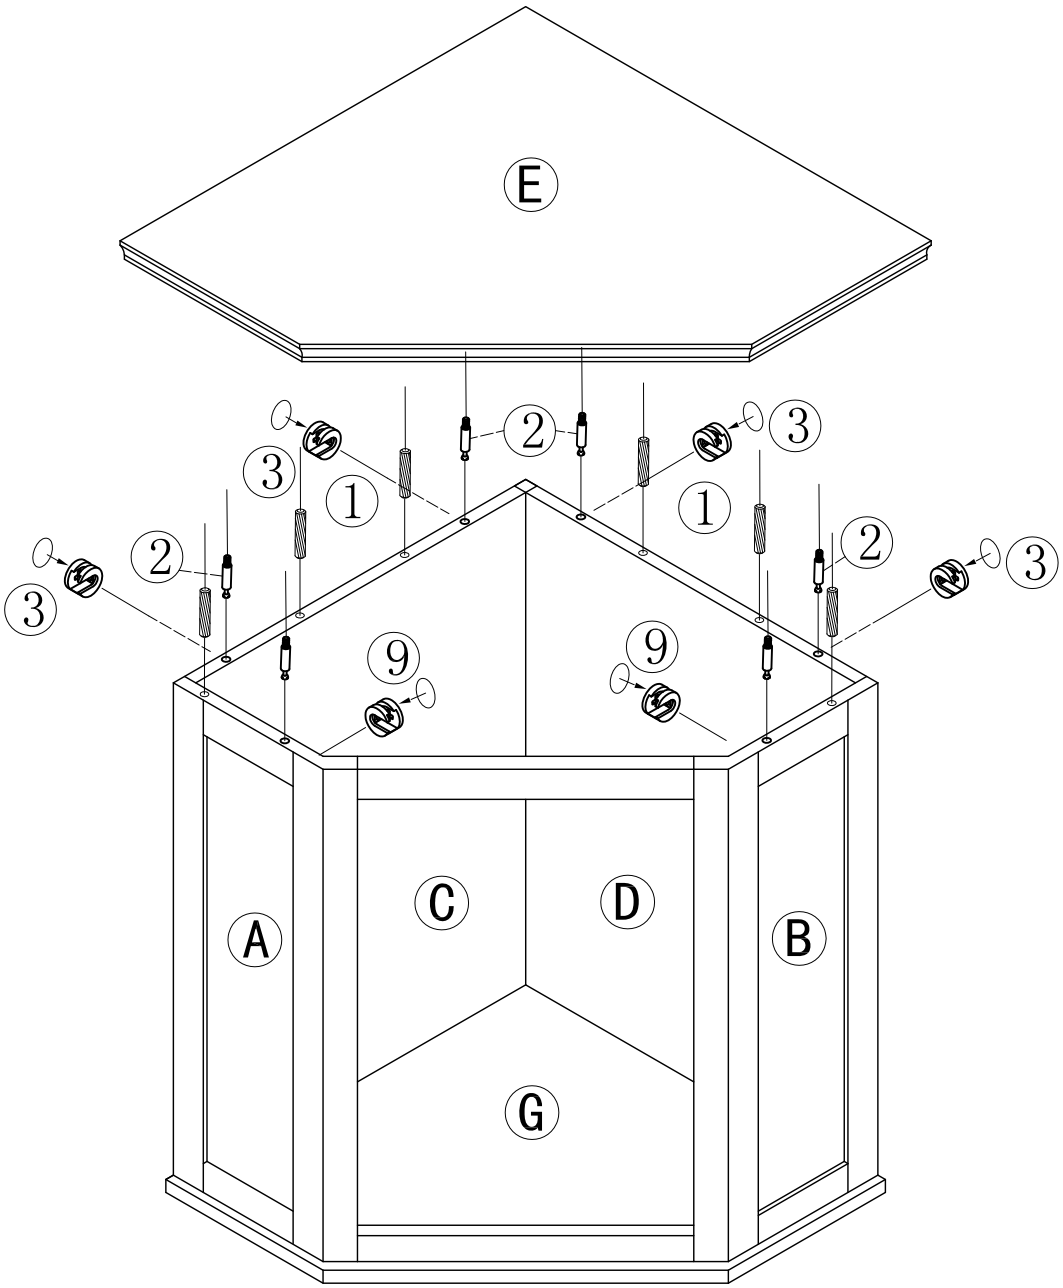

STEP 5
ÉTADE 5
PASO 5

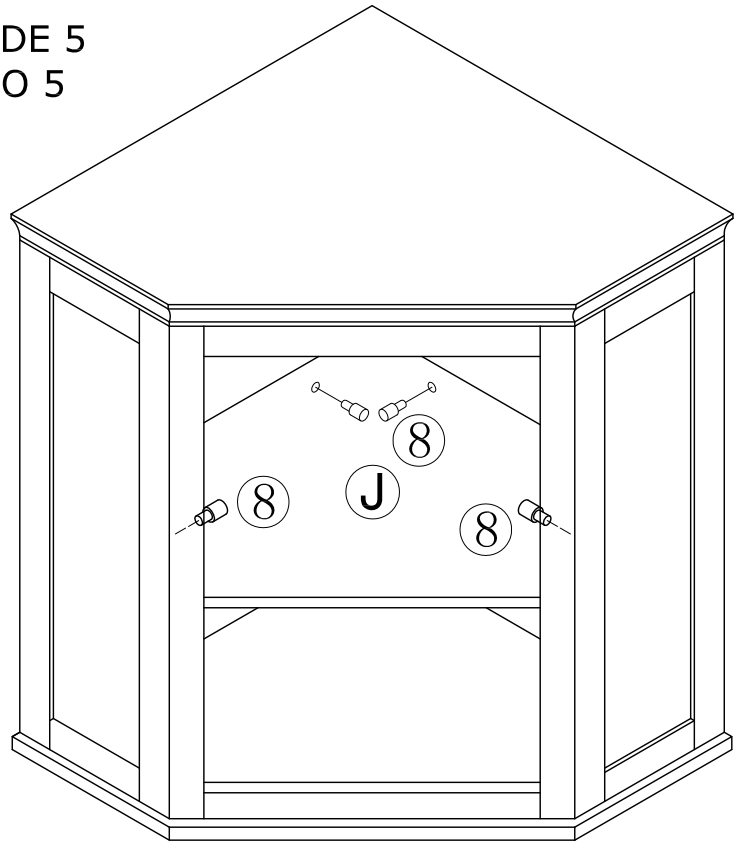

STEP 6
ÉTADE 6
PASO 6

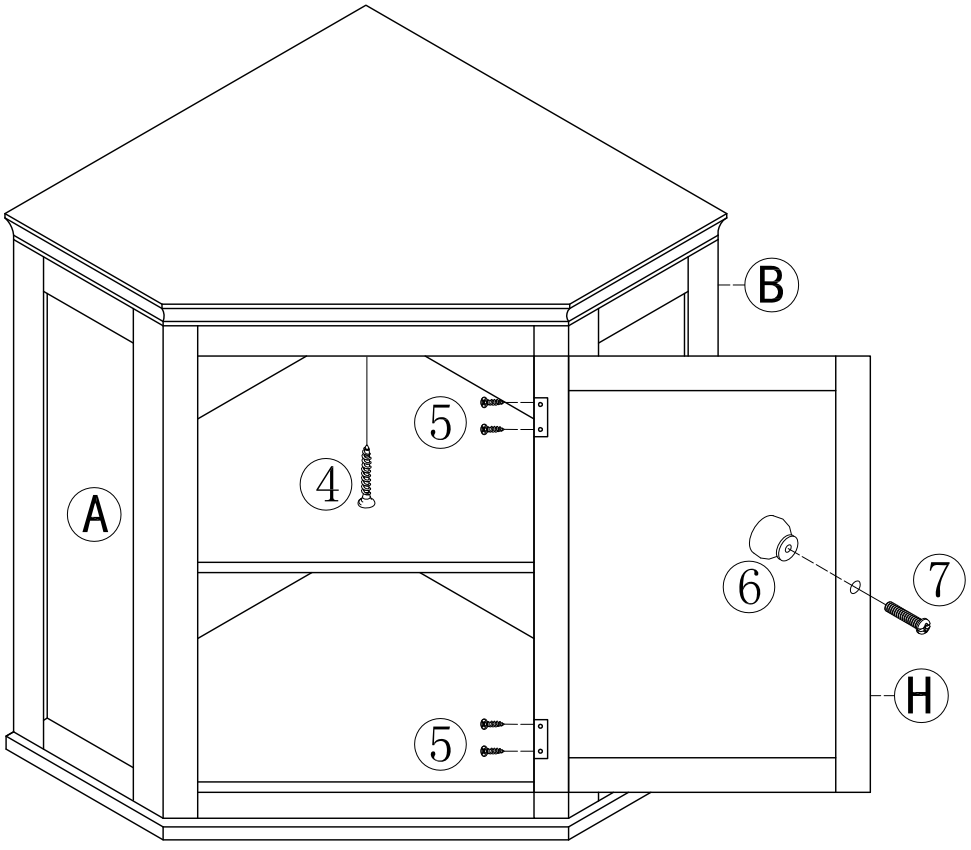

STEP 7
ÉTADE 7
PASO 7

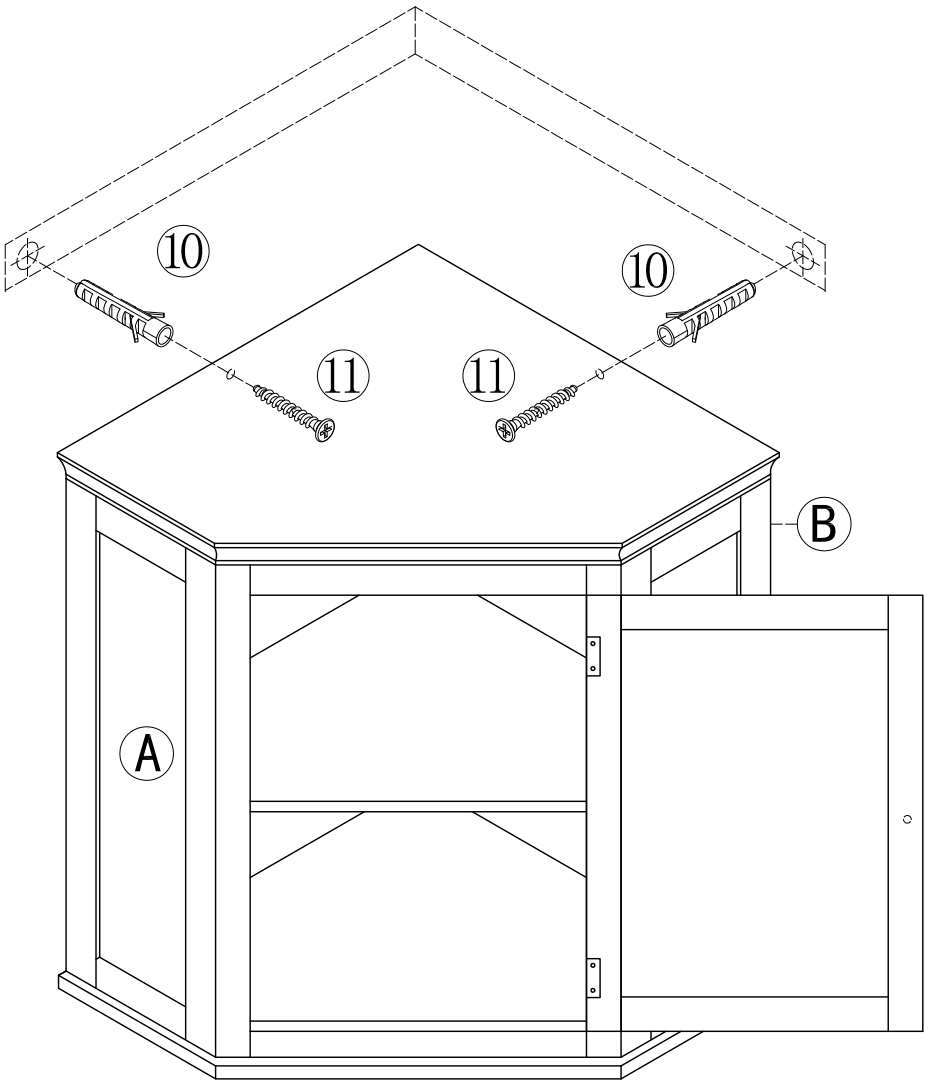

STEP 8
ÉTADE 8
PASO 8